
1.Diagram:

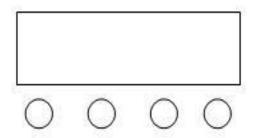

A. Function

B. Up

C. Down

D. Enter

E. LED display

A B C D

HOW TO OPERATE?

Press button A, there will be eight different effects.

The fist two numeric stands for functions (refer to Diagram II)

The last two numeric stands for DMX address, or speed.

You can modify it with B or C button..

D button is to confirm while you settled.

2.LED Display function cross-references.

(D button is to confirm while you settled)

No.	Display	Function
1	A001	6 CHs Address Code, (001—512)
		Change the address code by B or C button
2	D001	12 CHs Address Code, (001—512)
		Change the address code by B or C button
3	H001	2 CHs Address Code, (001—512)
		Change the address code by B or C button
4	CC 00	7Colors Changing, (01—99)
		Color change fast by B or C button
5	LL 00	7colors gradual change, (01—99)
		Speed of gradual changing by B or C button
6	CP 00	7Colors pulse changing, (01—99)
		Speed of gradual changing by B or C button
7	DE00	7Colors pulse changing, (01—99)
		Speed of gradual changing by B or C button
8	W255	White color Changing, (000—255)
		Change the color by B or C button
9	Y255	Yellow color Changing, (000—255)
		Change the color by B or C button

3. DMX512 6 channels

Channels	Function	DMX Value
CH 1	Dimmer	W、Y From dark to light
CH 2	Strobe	W、Y From Slow to Fast
CH 3	Macro	0-25 No Function 2635: macro 1; 126135: macro 11; 136145: macro 1; 236245: macro 11; 246255: Sound Model;
CH 4	Macro Speed	From Slow to Fast
CH 5	W Dimmer	W From dark to light
CH 6	Y Dimmer	Y From dark to light

4. DMX512 12 channels

Channels	Function	DMX Value
CH 1	Dimmer	W、Y From dark to light
CH 2	Strobe	W、Y From Slow to Fast
CH 3	Macro	0-25 No Function 2635: macro 1; 126135: macro 11;
		136145: macro 1;
CH 4	Macro Speed	From Slow to Fast
CH 5	1W Dimmer	1W From dark to light
CH 6	1Y Dimmer	1Y From dark to light
CH 7	2W Dimmer	2W From dark to light
CH 8	2Y Dimmer	2Y From dark to light
CH 9	3W Dimmer	3W From dark to light
CH 10	3Y Dimmer	3Y From dark to light
CH 11	4W Dimmer	4W From dark to light
CH 12	4Y Dimmer	4Y From dark to light

5. DMX512 2 Channels

Channels	Function	DMX Value
CH 1	W Dimmer	W From dark to light
CH 2	Y Dimmer	Y From dark to light